




# Philips Sonicare DiamondClean Metal Brush Connector Replacement

Written By: Zachary Bertrand

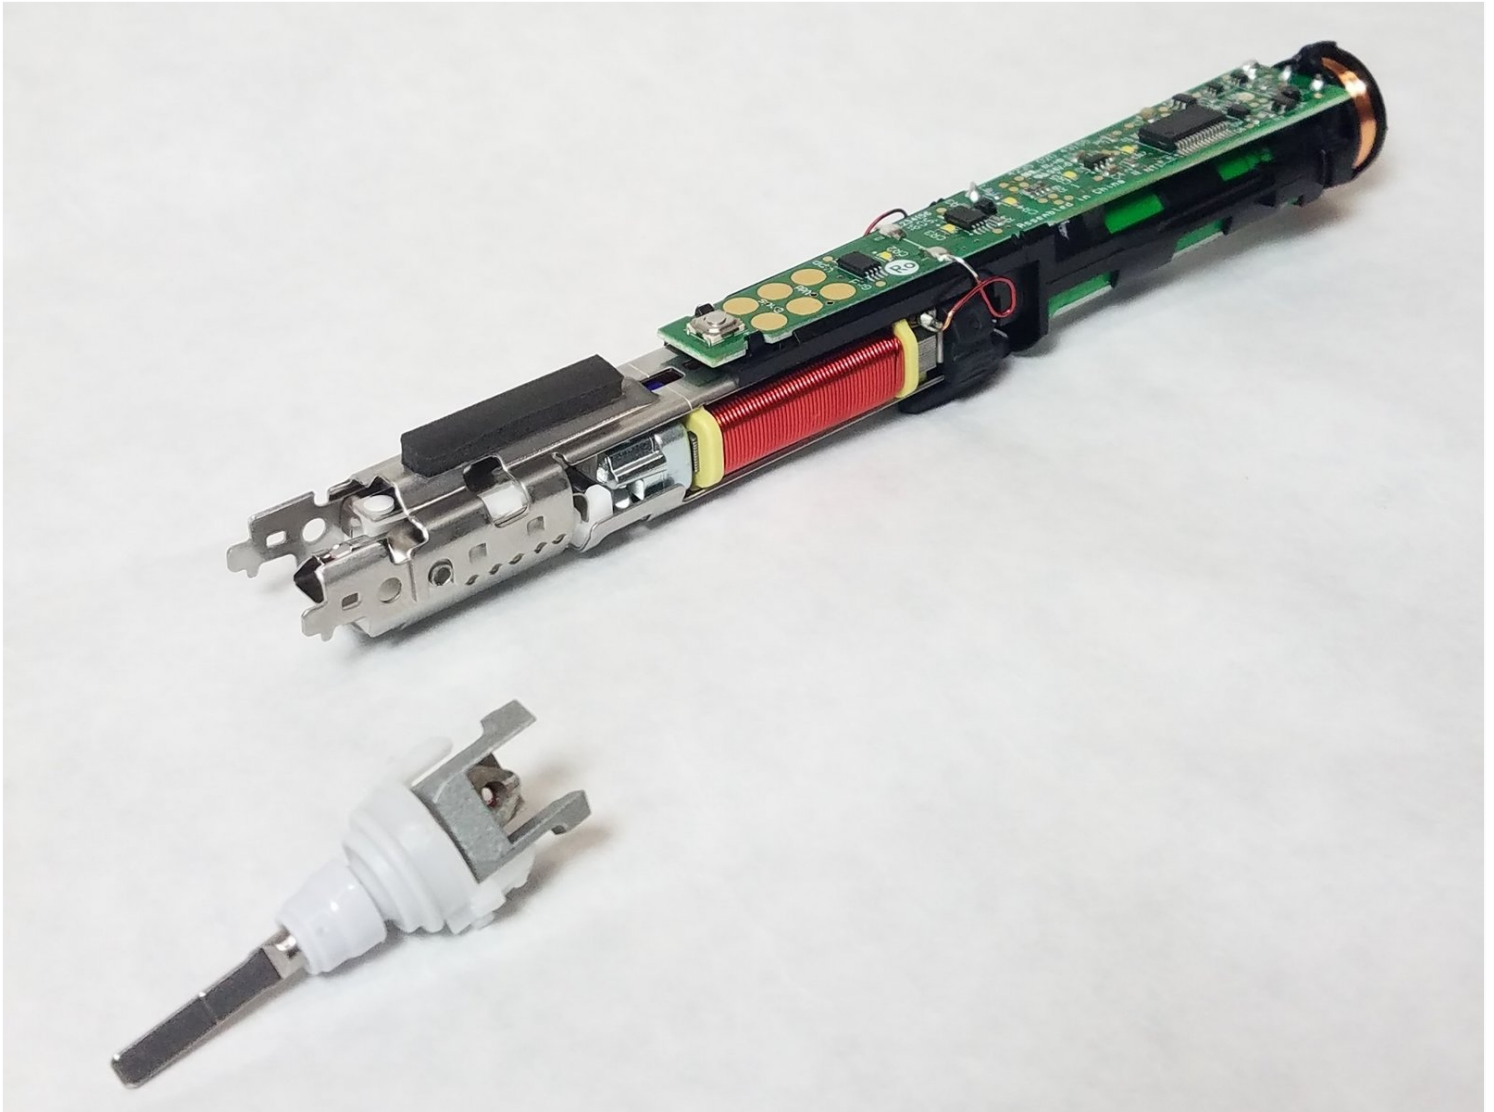


## TOOLS:

Spudger (1)  
Phillips #00 Screwdriver (1)  
Tweezers (1)

## PARTS:

Philips Sonicare DiamondClean HX93  
Series Silicon Water Proof Flange (1)  
10mm screw (1)

### Step 1 — Case Replacement

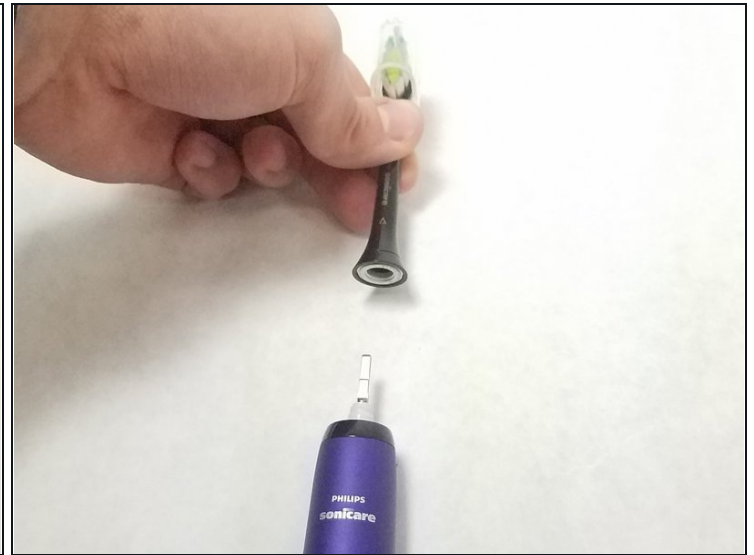

- Pull the head from toothbrush.

### Step 2



- Use a nylon spudger to pry the chrome cap at the bottom off.

### Step 3



- Use a nylon spudger to release the black tabs on either side of internals.

### Step 4




- Put the metal head on a solid surface with handle perpendicular to the surface. Firmly, yet gently, push down until the internals start to slide out.

## Step 5 — Metal Brush Connector Replacement



- Use a Phillips screwdriver to remove the screw at the base of the metal head.


## Step 6

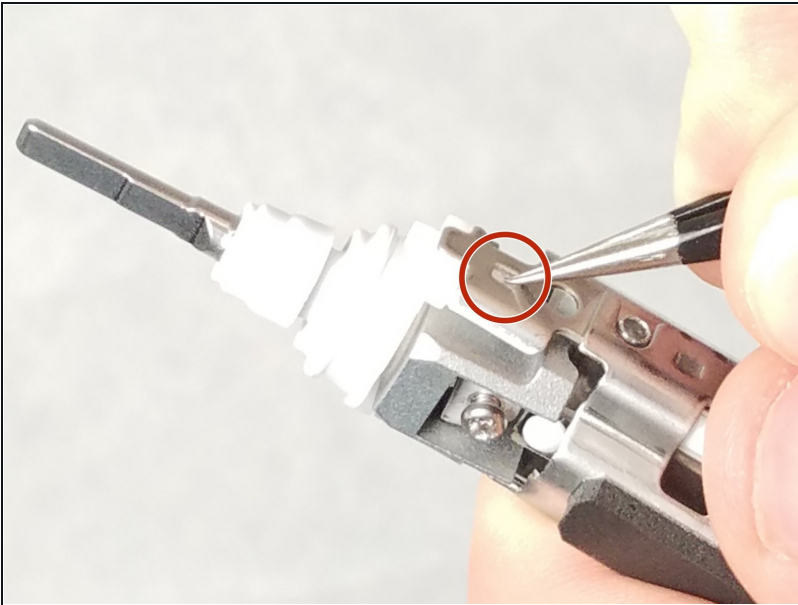

- Use fine tip [tweezers](#) to push the white plastic tabs in to release the head from the innards.



## Step 7

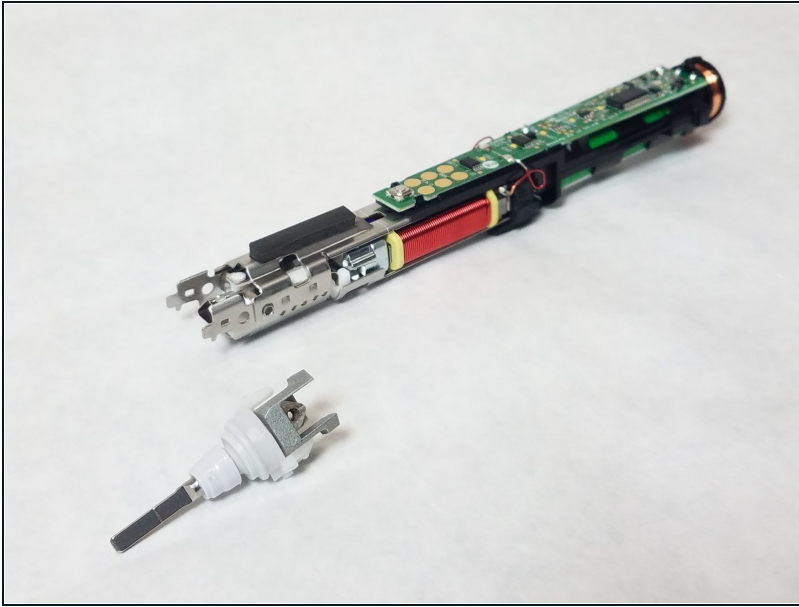

- Gently pull the metal head from the innards.

---

To reassemble your device, follow these instructions in reverse order.