


Toshiba Satellite S55T-B5335 Wi-Fi Adapter Replacement

This guide will walk you through the process of removing the Wi-Fi Adapter.

Written By: George Gillespie

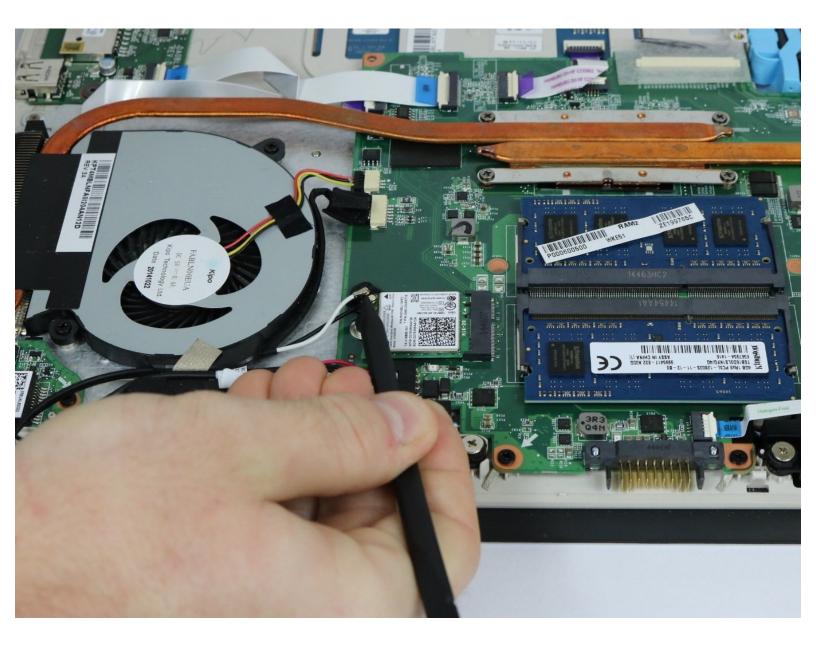


INTRODUCTION

The Wi-Fi adapter receives a signal from a wireless router and gives the laptop the ability to connect to a network and internet without the use of wires. Please refer to the <u>Wi-Fi Troubleshooting Guide</u> to determine if your Wi-Fi adapter needs replaced.

TOOLS:

- iFixit Opening Tools (1)
- Phillips #1 Screwdriver (1)
- Heavy-Duty Spudger (1)

Step 1 — Battery

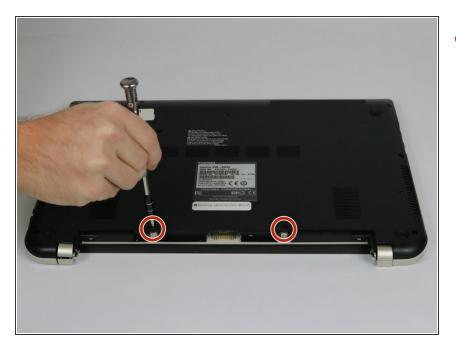

 Remove the two 7 mm Phillips #1 screws that hold the battery in place.

Step 2



• Pull the battery from laptop.

Step 3 — Bottom Cover



Remove the ten 7 mm Phillips #1 screws that secure the back cover.

Step 4



- Wedge the tip of a plastic opening tool between the back cover and the metal frame.
- Twist the plastic opening tool, while wedged, in order to release the retaining tabs from the frame.
- Repeat these steps in a circular pattern around the laptop to release all retaining tabs.

Step 5



• Once all retaining tabs are released from the frame, you can pull up on the back cover to remove it.

Step 6 — Wi-Fi Adapter




 Using the pointed end of the Spudger, gently disconnect the antenna (white and black wires) from the Wi-Fi adapter.

Step 7



 Remove the single 4 mm Phillips #1 screw holding the Wi-Fi adapter in place.

Step 8

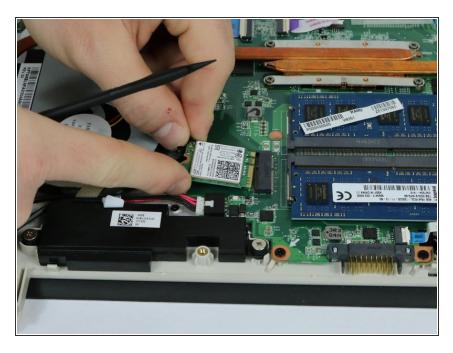

 While grabbing the Wi-Fi adapter on both sides, gently pull away from the socket in the direction of the removed screw.

To reassemble your device, follow these instructions in reverse order.